

WARNING

Read Before Printing Template

The In-Dash Template on page 2 of this document is accurate only if your printer is set up to print it actual size. Do this by unchecking the "Fit to page" option in the printer menu. To do this:

1. Click File|Print.
2. In the Print Dialog Box, uncheck the "Fit to page" option. *(This is located below the Properties button in the top right corner of the print dialog box.)*
3. Click OK to print.

Read Before Using Template

Carefully check the print with a ruler. Check it for both horizontal and vertical accuracy by measuring the distance between the mounting holes.

Dimensions are first given in millimeters and then inches (in parenthesis). If metric drills are not available, use a 3/16 inch drill.

